


PowerBox Systems®

World Leaders in RC
Power Supply Systems

Instruction Manual

POWER EXPANDER SRS

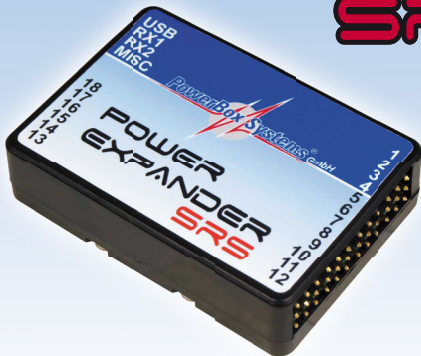



PowerBox

Dear customer,

We're delighted that you have chosen the **PowerExpander SRS** from our range of products. We hope you have great pleasure and success with this accessory!

1. Product description

The **PowerExpander SRS** makes it possible to exploit all the channels provided by your radio control system when using small but highly-specified receivers. Safety is also significantly enhanced, because two receivers can be connected to the **PowerExpander SRS**. The integral **S**erial **R**eceiver **S**ystem selects any receiver, and - if an error should occur - switches over automatically to the receiver which is still operating. This represents a simple method of doubling the number of receiver aerials.

The unit is fitted with a high-current socket to ensure that the power supply can cope with the large number of channels which it makes available. It also features an output carrying the S-BUS signal, which makes it possible to use any radio control system in conjunction with an S-BUS wiring arrangement.


Features:

- Access to a maximum of eighteen channels
- Simple wiring: the receivers are connected using a serial link
- Integral SRS, allowing the use of two receivers
- Compatible with: Futaba, Spektrum, Graupner, Jeti, Multiplex and JR
- High-current power socket
- S-BUS output for use in a BUS system
- User-variable frame rate
- Can be updated using the **PowerBox USB Interface**

2. Connecting the various radio control systems

Most types of receiver require intervention to activate the bus output or set the correct operating mode.

By default the **PowerExpander SRS** is set up for Futaba. If you intend to use a different radio control system, you can change the setting using the **PowerBox USB Interface Adapter** in conjunction with the **PowerBox Terminal** program, which is available free of charge. USB adapters made by Jeti or Multiplex can also be used.

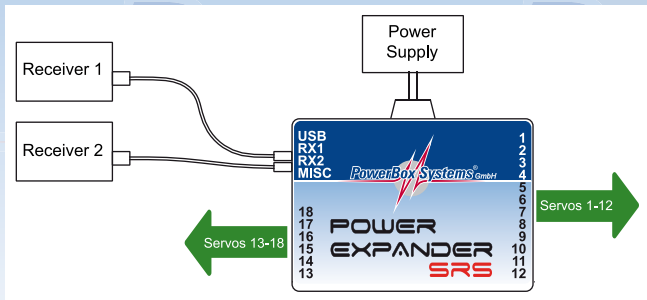

a) Futaba FASST and FASSTEST:

The **PowerExpander SRS** works with the S-BUS signal. Many receivers require one output to be re-assigned to S-BUS:

- R7003SB: no adjustment necessary; signal present at "PORT 1".
- R7008SB: output 8 must be set to S-BUS, Mode B or Mode D.
- R6303SB: no adjustment necessary; direct S-BUS output fitted
- R6308SB(T): output 8 must be set to S-BUS, Mode B or Mode D.

Other receivers with an S-BUS output can also be used; please refer to the set-up notes included in the instructions supplied with the receiver.

b) Spektrum DSM2 and DSMX:

If you are using a Spektrum **AR 9020**, the **SRXL** output can be used: all eighteen channels are then available without requiring an **X-Plus module**. No adjustments are required: all you have to do is connect the **SRXL** output to the **PowerExpander**. Once again it is also possible to connect two receivers.

c) Graupner HoTT:

When a HoTT system is used, the receivers should first be bound; adjustments can then be carried out in the Telemetry menu. All receivers require the **CH-OUT-TYPE** to be set to **SUMD-OF-16**.

- GR16 and GR24: **SUMD-OF-16** is present at **Output 8**.
- GR32: **SUMD-OF-16** is present at **Output S**.

d) Jeti EX:

With a Jeti system you simply connect one or two **R-Sat2** receivers. These should be bound to the transmitter, and then set either to **UDI** or **EX**.

- **UDI:** this setting retains the telemetry function at the EXT output; the R-SAT is connected to **PPM** out and the **PowerExpander SRS**.
Disadvantage of UDI: only twelve channels available
- **EX:** all sixteen channels available.
Disadvantage of EX: the signal is present at the EXT socket; at present no further telemetry equipment can be connected (unless a third R-Sat is installed).

Additional settings: frame rate 14 ms, computed

e) Multiplex M-LINK:

If you are using a Multiplex system, the **B/D** output at the receiver must be set to **Serial Servo Data SRXL**. This can be accomplished using the USB lead and the **MPX Launcher PC** program. If you connect two receivers, the following settings must also be entered: **max. hold duration: 0.2 s** and **max. Failsafe duration: 0.0 s**.

f) JR DMSS:

For a JR system you need DMSS receivers with an **X-BUS** output, e.g. **RG731BX**. The receiver or receivers are first bound, then set to **MODE A** at the transmitter. The **X-BUS** output now generates sixteen channels, which are accessible from the **PowerExpander SRS**.

3. S-BUS output

At the **MISC** socket a **PowerBUS** signal is present which is identical to the widely used **S-BUS** signal - regardless of the radio control system connected to it. This means that any radio control system can be used in conjunction with **PowerBUS** components.

Our range of products includes adapter leads which ensure that sufficient current is available to power the bus.

4. Frame rate

Like the radio control system, the frame rate can also be selected using the free **PowerBox Terminal** program. The default setting is 18 ms; this value works with all servo types currently available.

5. Set contents

- **PowerExpander SRS**
- 2x Patch-lead 18cm
- Self-adhesive pad
- Operation instruction in German and English

6. Service note

We are anxious to offer good service to our customers, and to this end we have set up a **Support Forum** which deals with all queries concerning our products. This relieves us of a great deal of work, as it eliminates the need to answer frequently asked questions time and again. At the same it gives you the opportunity to obtain help quickly all round the clock - even at weekends. All the answers are provided by the **PowerBox Team**, guaranteeing that the information is correct.

Please use the **Support Forum** before you telephone us.

You can find the forum at the following address:

www.forum.powerbox-systems.com

7. Guarantee conditions

At **PowerBox Systems** we insist on the highest possible quality standards in the development and manufacture of our products. They are guaranteed “**Made in Germany**”!

That is why we are able to grant a **36 month guarantee** on our **PowerBox PowerExpander SRS** from the initial date of purchase. The guarantee covers proven material faults, which will be corrected by us at no charge to you. As a precautionary measure, we are obliged to point out that we reserve the right to replace the unit if we deem the repair to be economically unviable.

Repairs which our Service department carries out for you do not extend the original guarantee period.

The guarantee does not cover damage caused by incorrect usage, e.g. reverse polarity, excessive vibration, excessive voltage, damp, fuel, and short-circuits. The same applies to defects due to severe wear.

We accept no liability for transit damage or loss of your shipment. If you wish to make a claim under guarantee, please send the device to the following address, together with proof of purchase and a description of the defect:

Service Address:

**PowerBox-Systems GmbH
Ludwig-Auer-Straße 5
D-86609 Donauwörth
Germany**



PowerBox Systems®

*World Leaders in RC
Power Supply Systems*

PowerBox-Systems GmbH

Certificated according to DIN EN ISO 9001:2008

Ludwig-Auer-Straße 5

D-86609 Donauwörth

Germany

Tel: +49-906-22 55 9

Fax: +49-906-22 45 9

info@PowerBox-Systems.com

www.PowerBox-Systems.com